

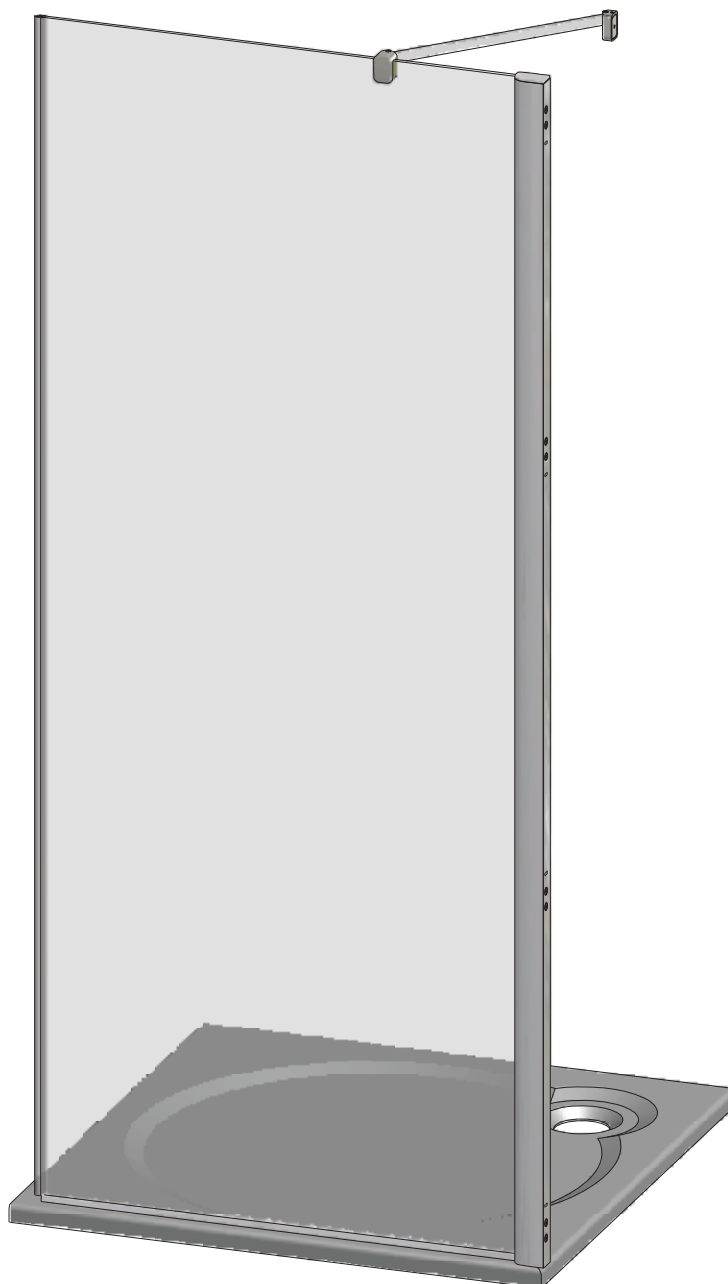
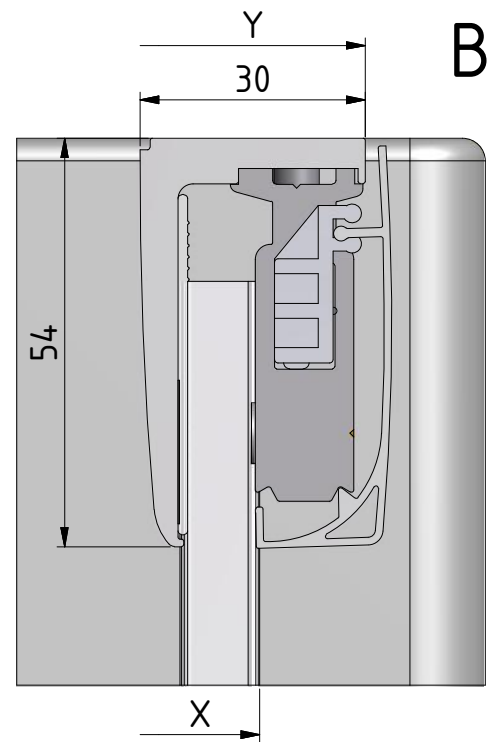


.:Montageanleitung.:Notice de montage.:Installation instructions.:Montážní návod.:

SPRCHOVÝ KOUT

HBB

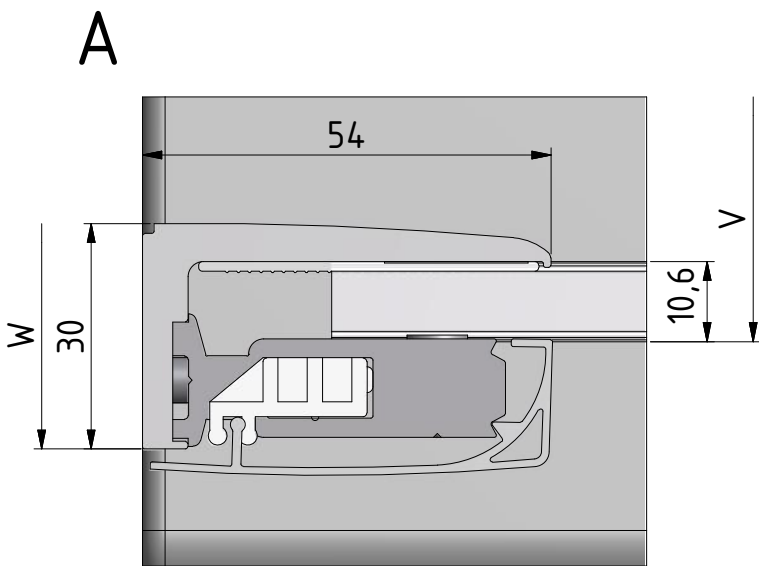

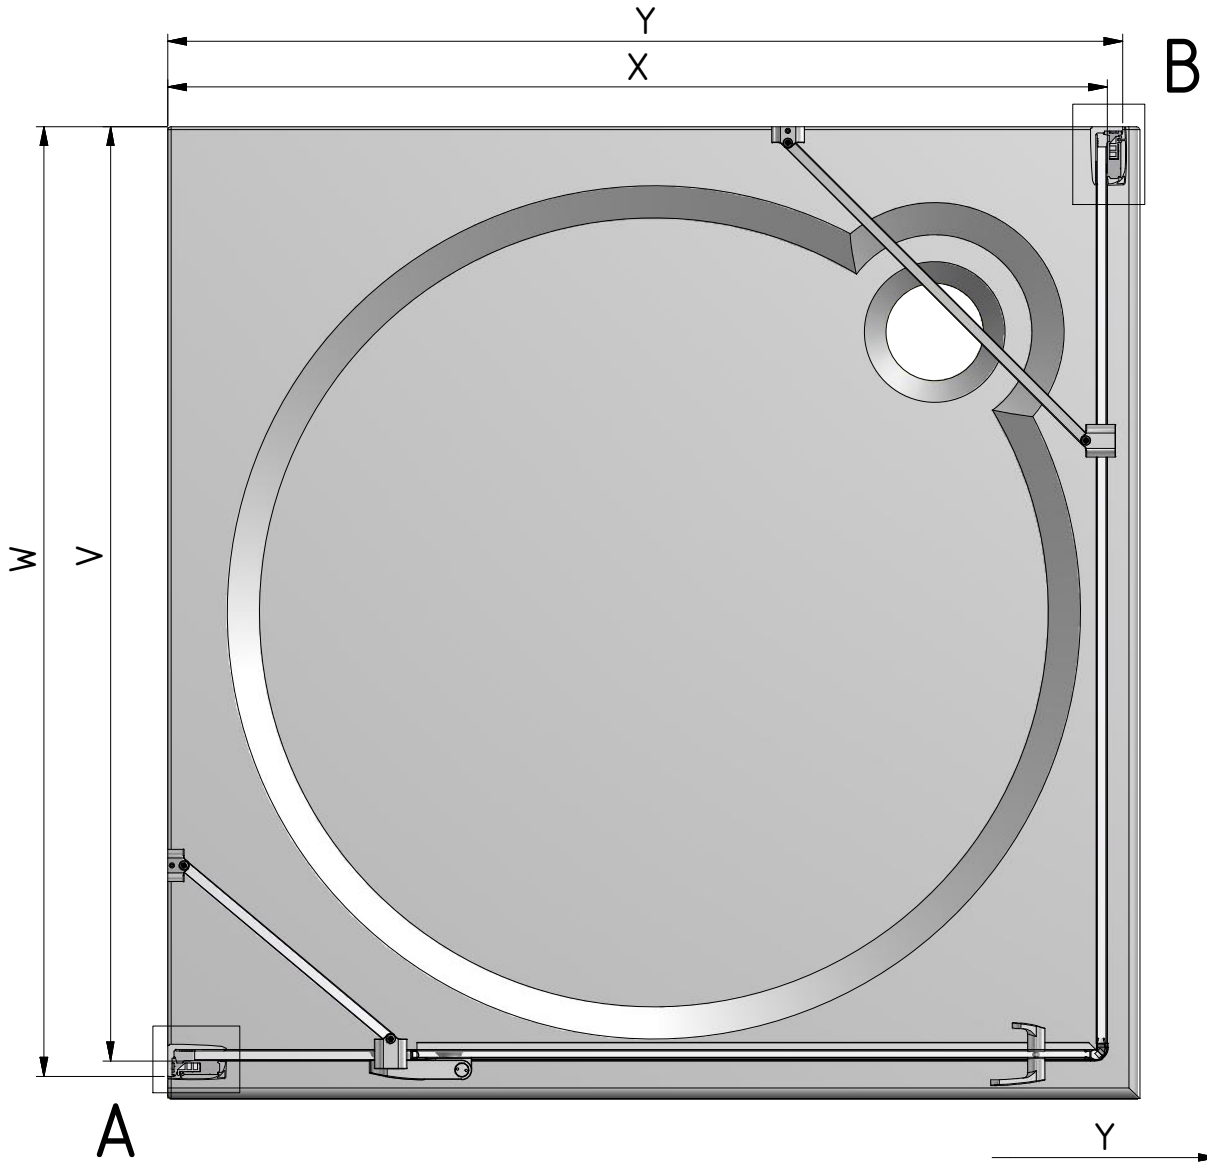

HBB

HBO

	V mm	W mm	X mm	Y mm
800	752-777	770-795	752-777	770-795
900	852-877	870-895	852-877	870-895
1000	952-977	970-995	952-977	970-995
1100	---	---	1052-1077	1070-1095
1200	---	---	1152-1177	1170-1195


1. 1x



2. 1x
(P2294)



3. 1x
(V174)

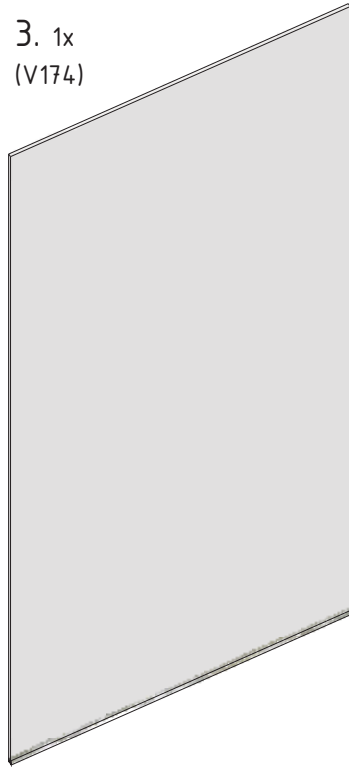

13. 1x
(M9097)



7. 4x
(M0511)



8. 4x
(M0811)




9. 4x
(M5974)




10. 4x
(M5975)




26. 1x
(M6645)




25. 1x
(M6646)




20. 1x
(P3646)

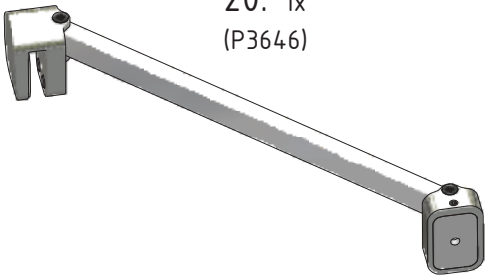


22. 1x
(MA3247)

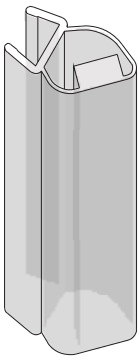


32. 4x
(M5924)




33. 4x
(M5925)




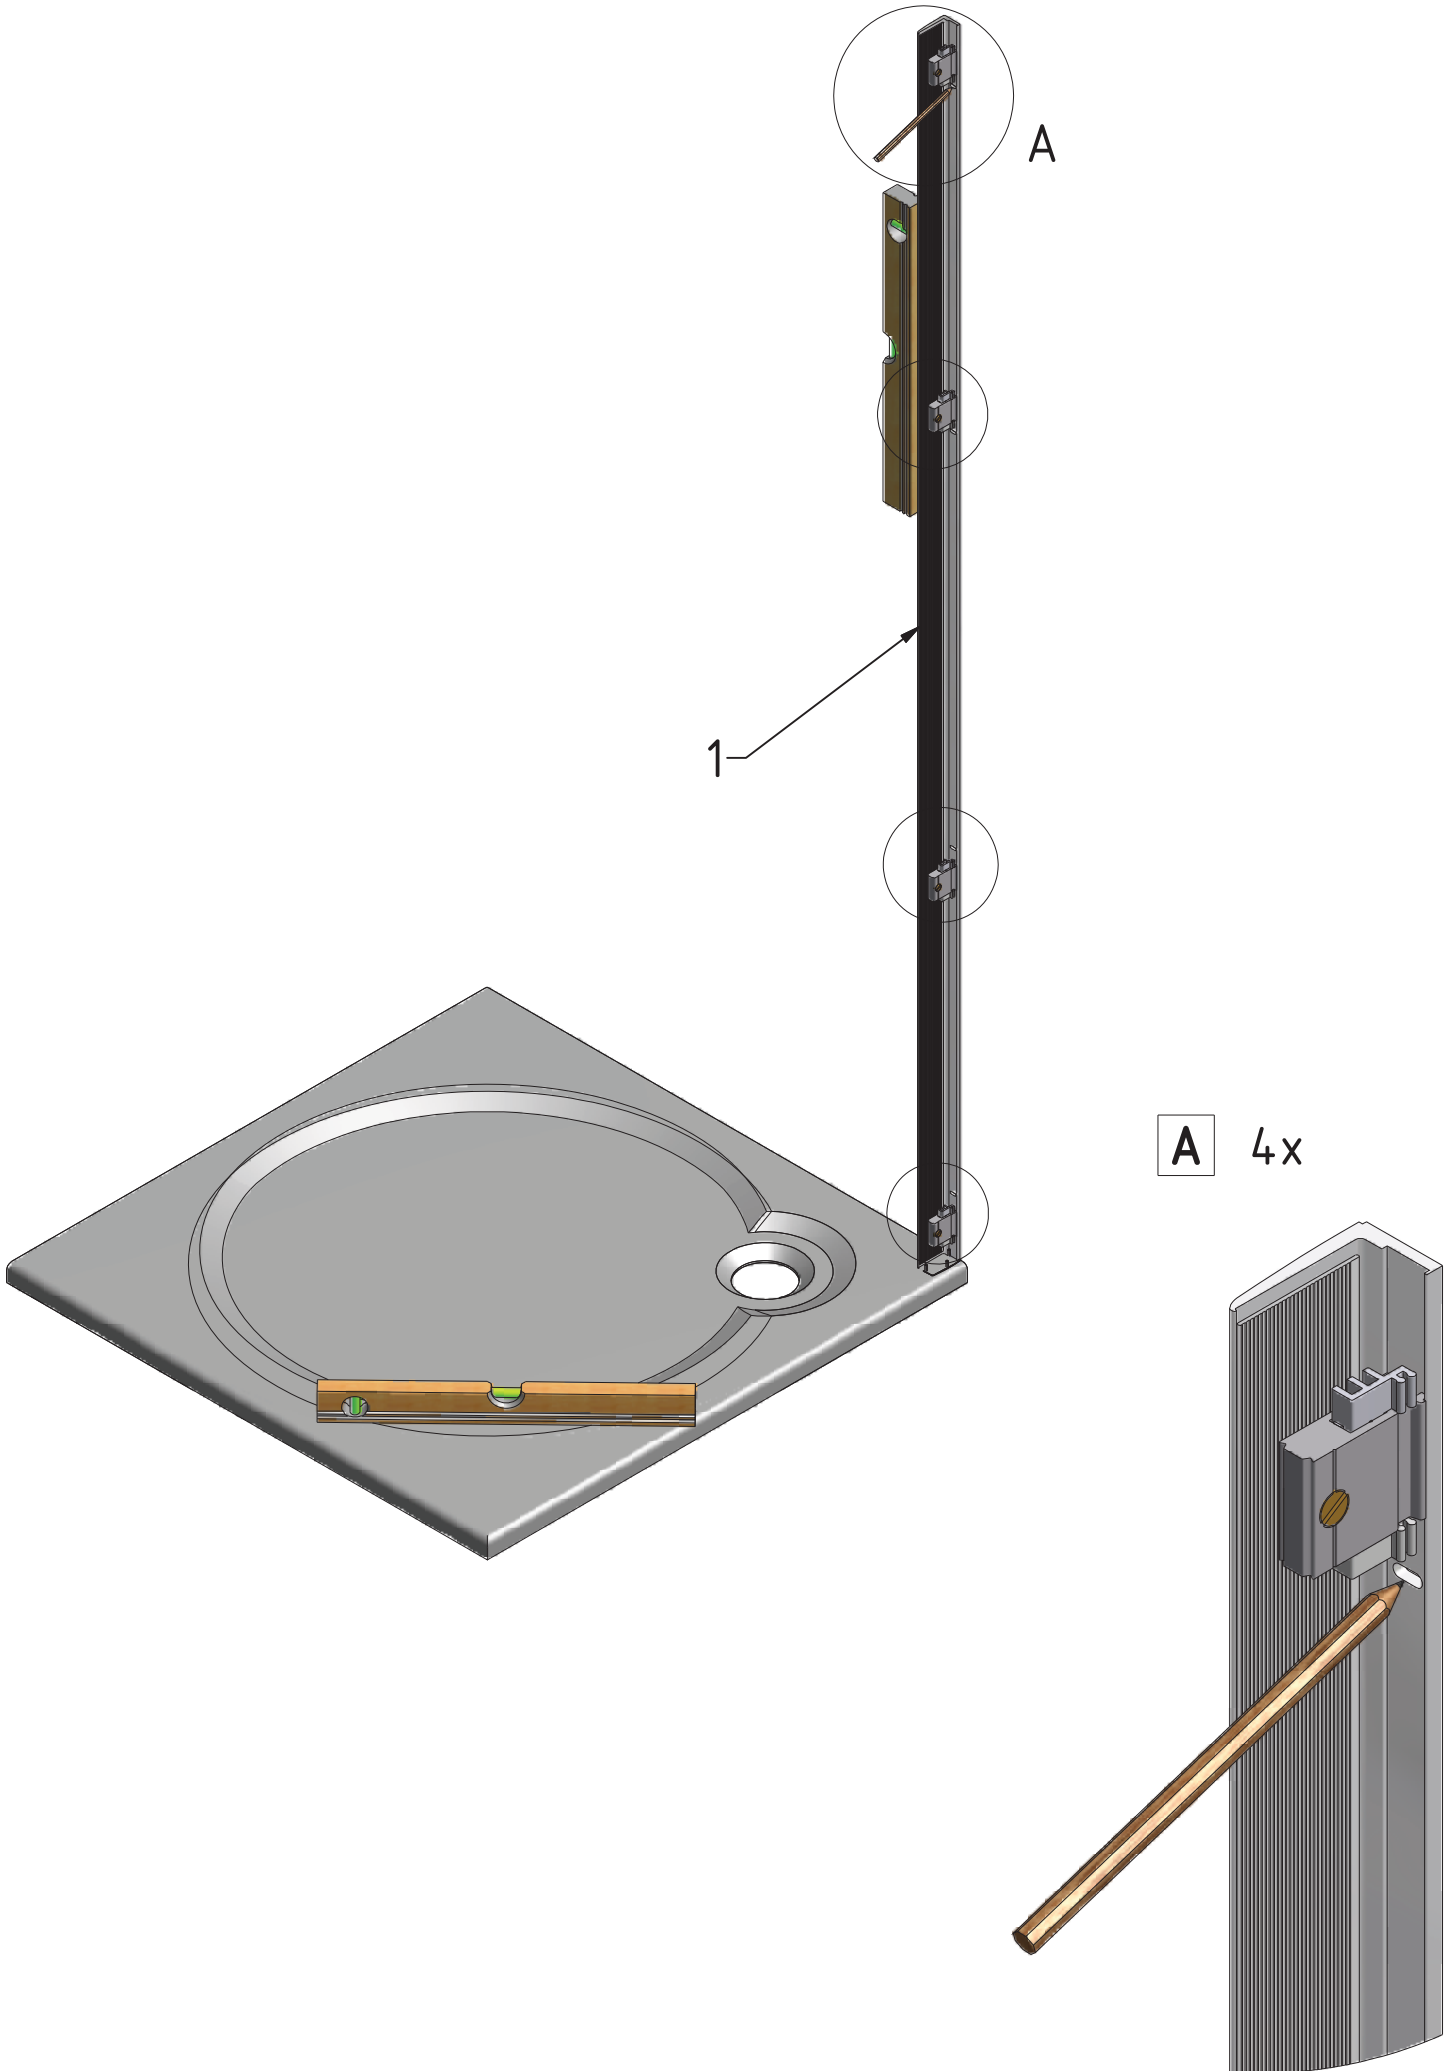

B 4x

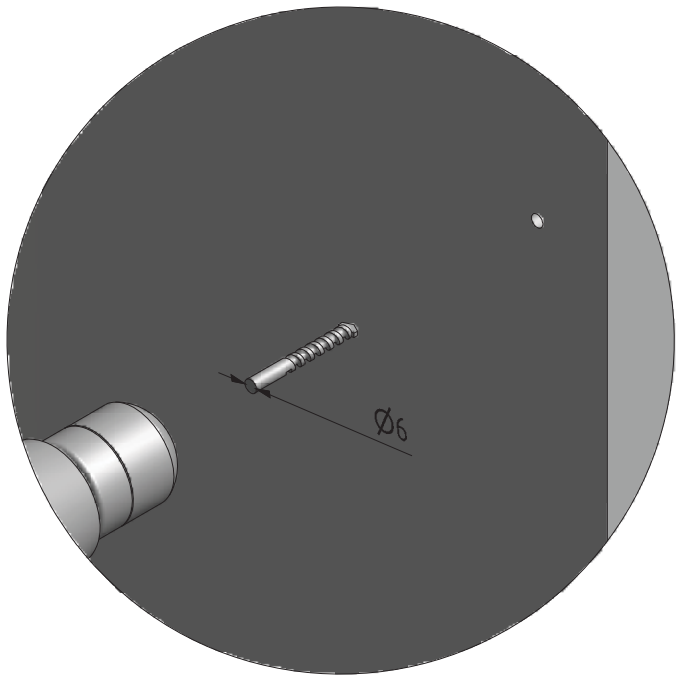

C 4x

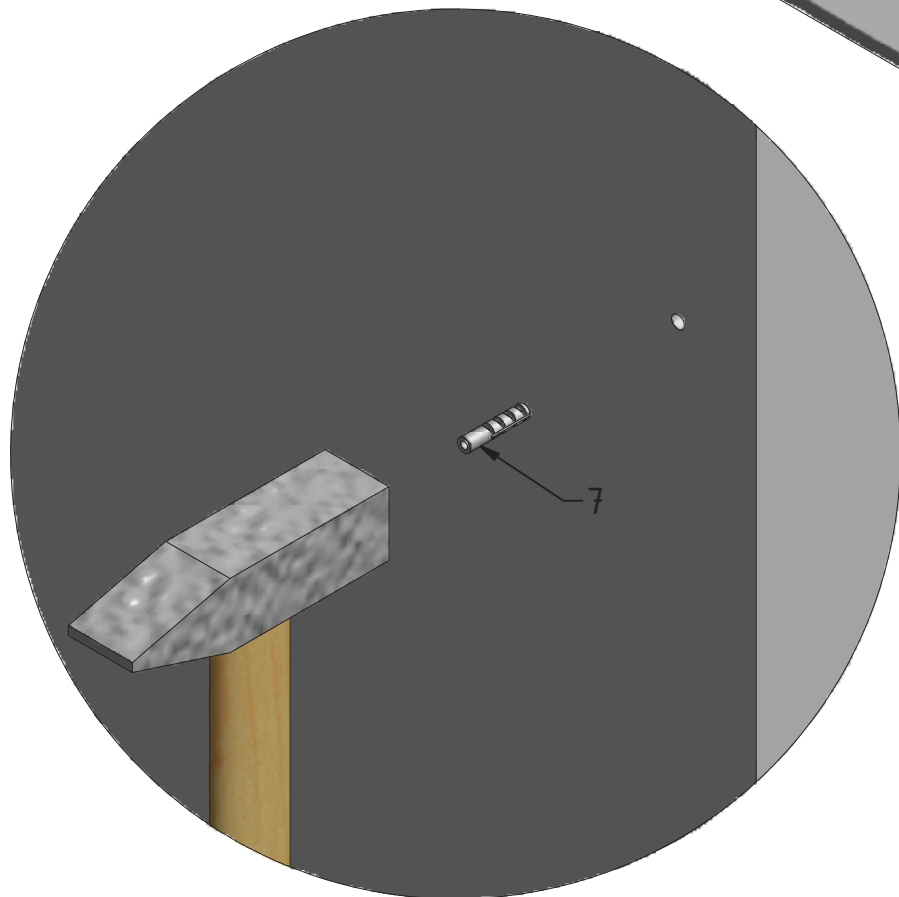


D 4x







E 4x

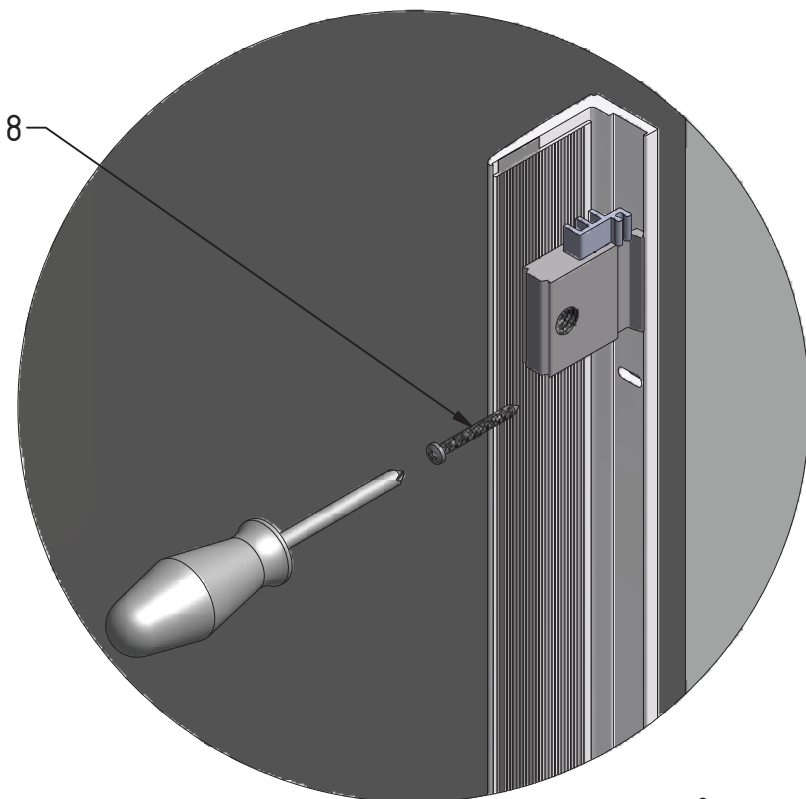







Sehen Montageanleitung HB01
See installation instructions HB01
Dle montážního návodu HB01

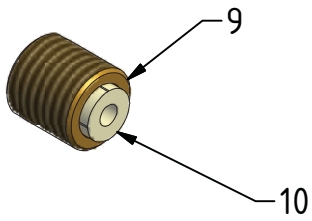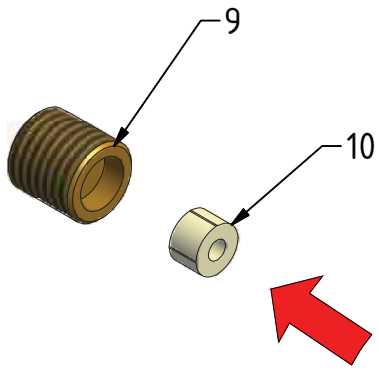

Variant 1.


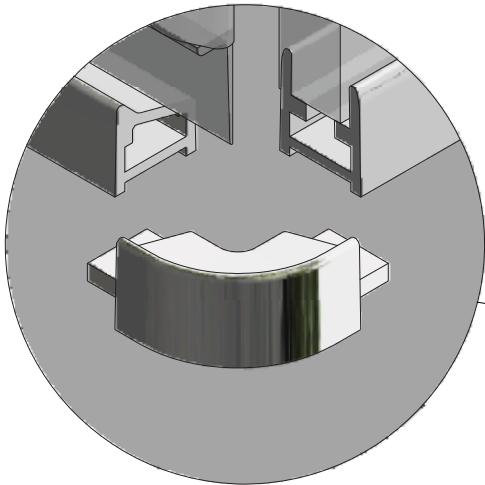


Variant 2.

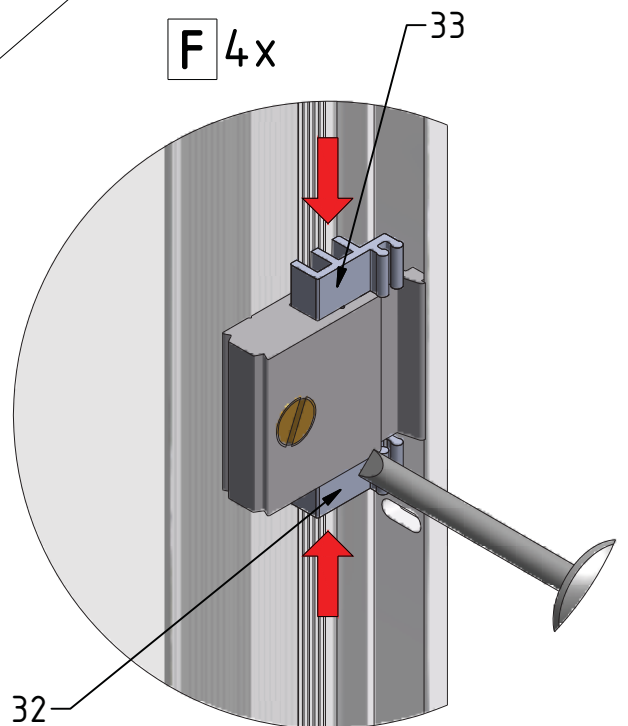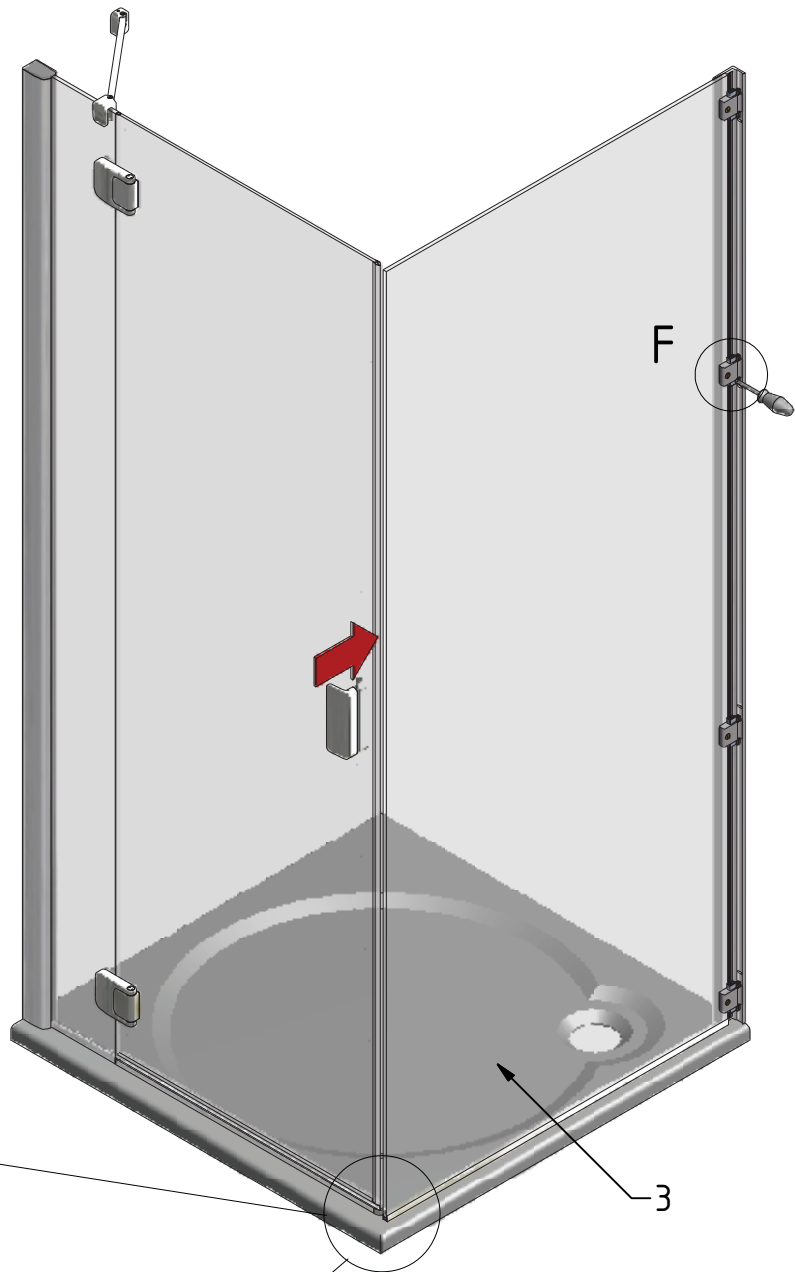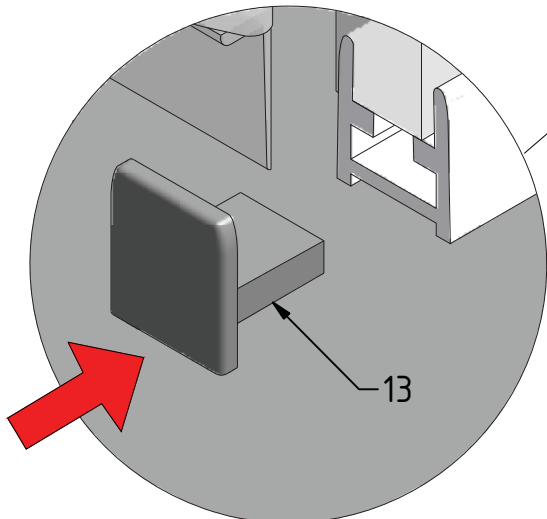




G

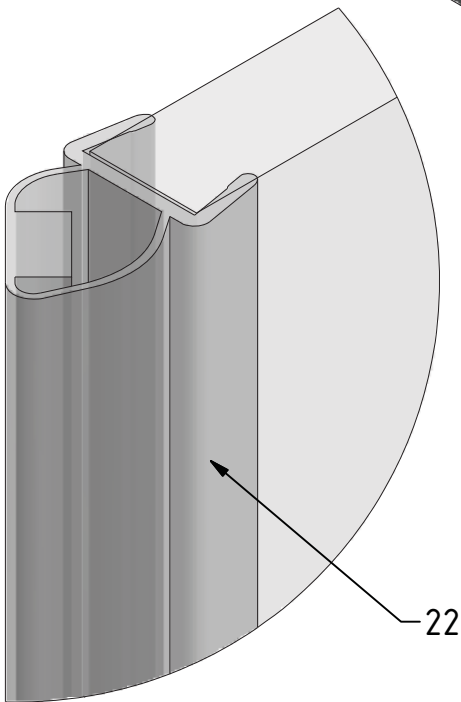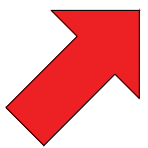


22

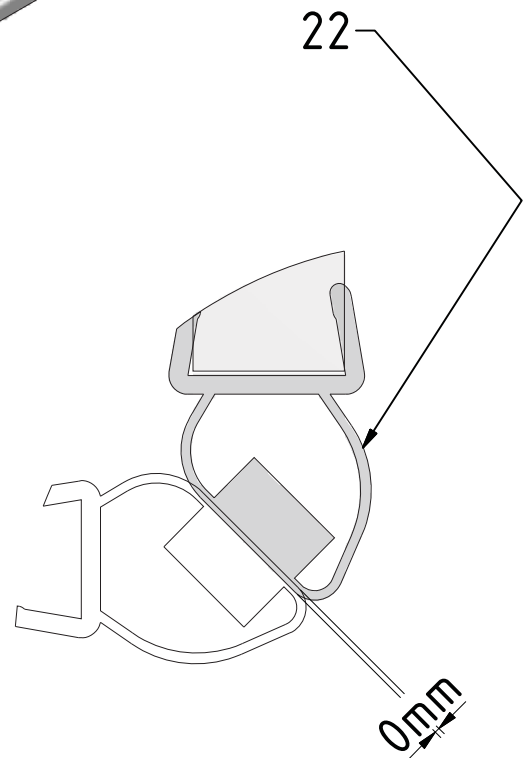



22

0mm

H1

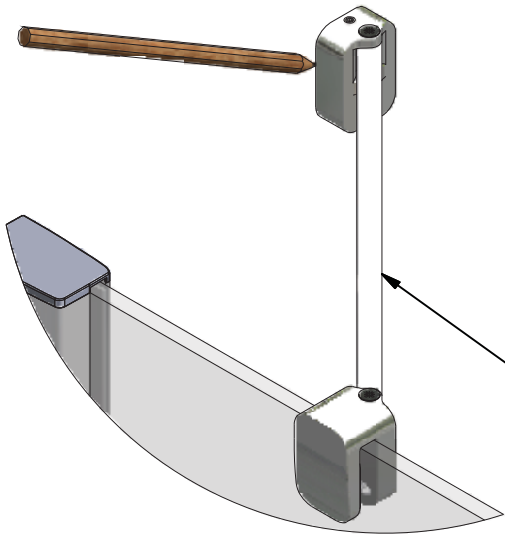

H2

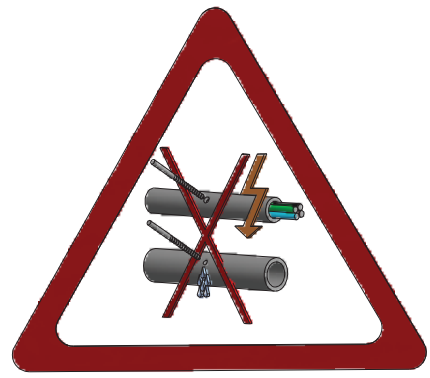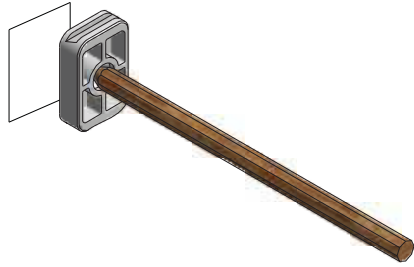


H3




H4




H5

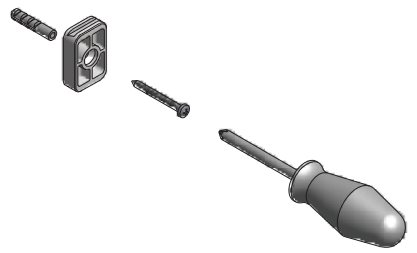


H6

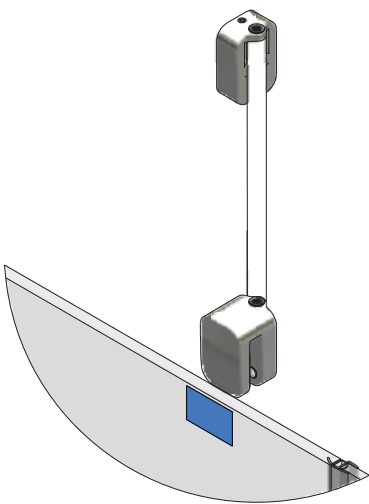


H7

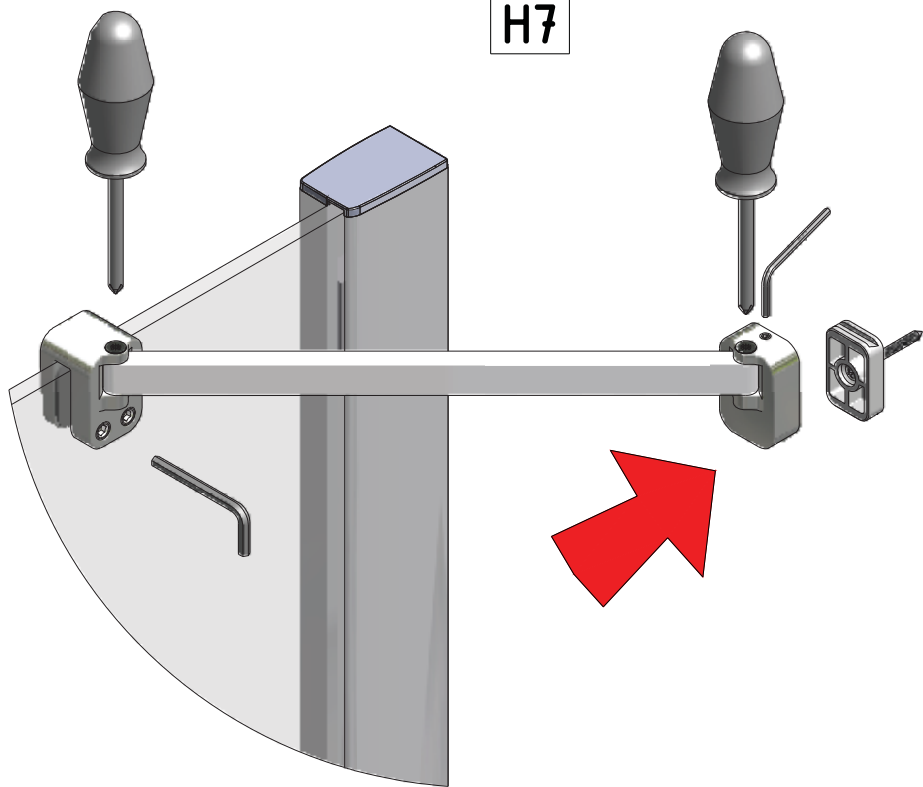

Varianta 1.

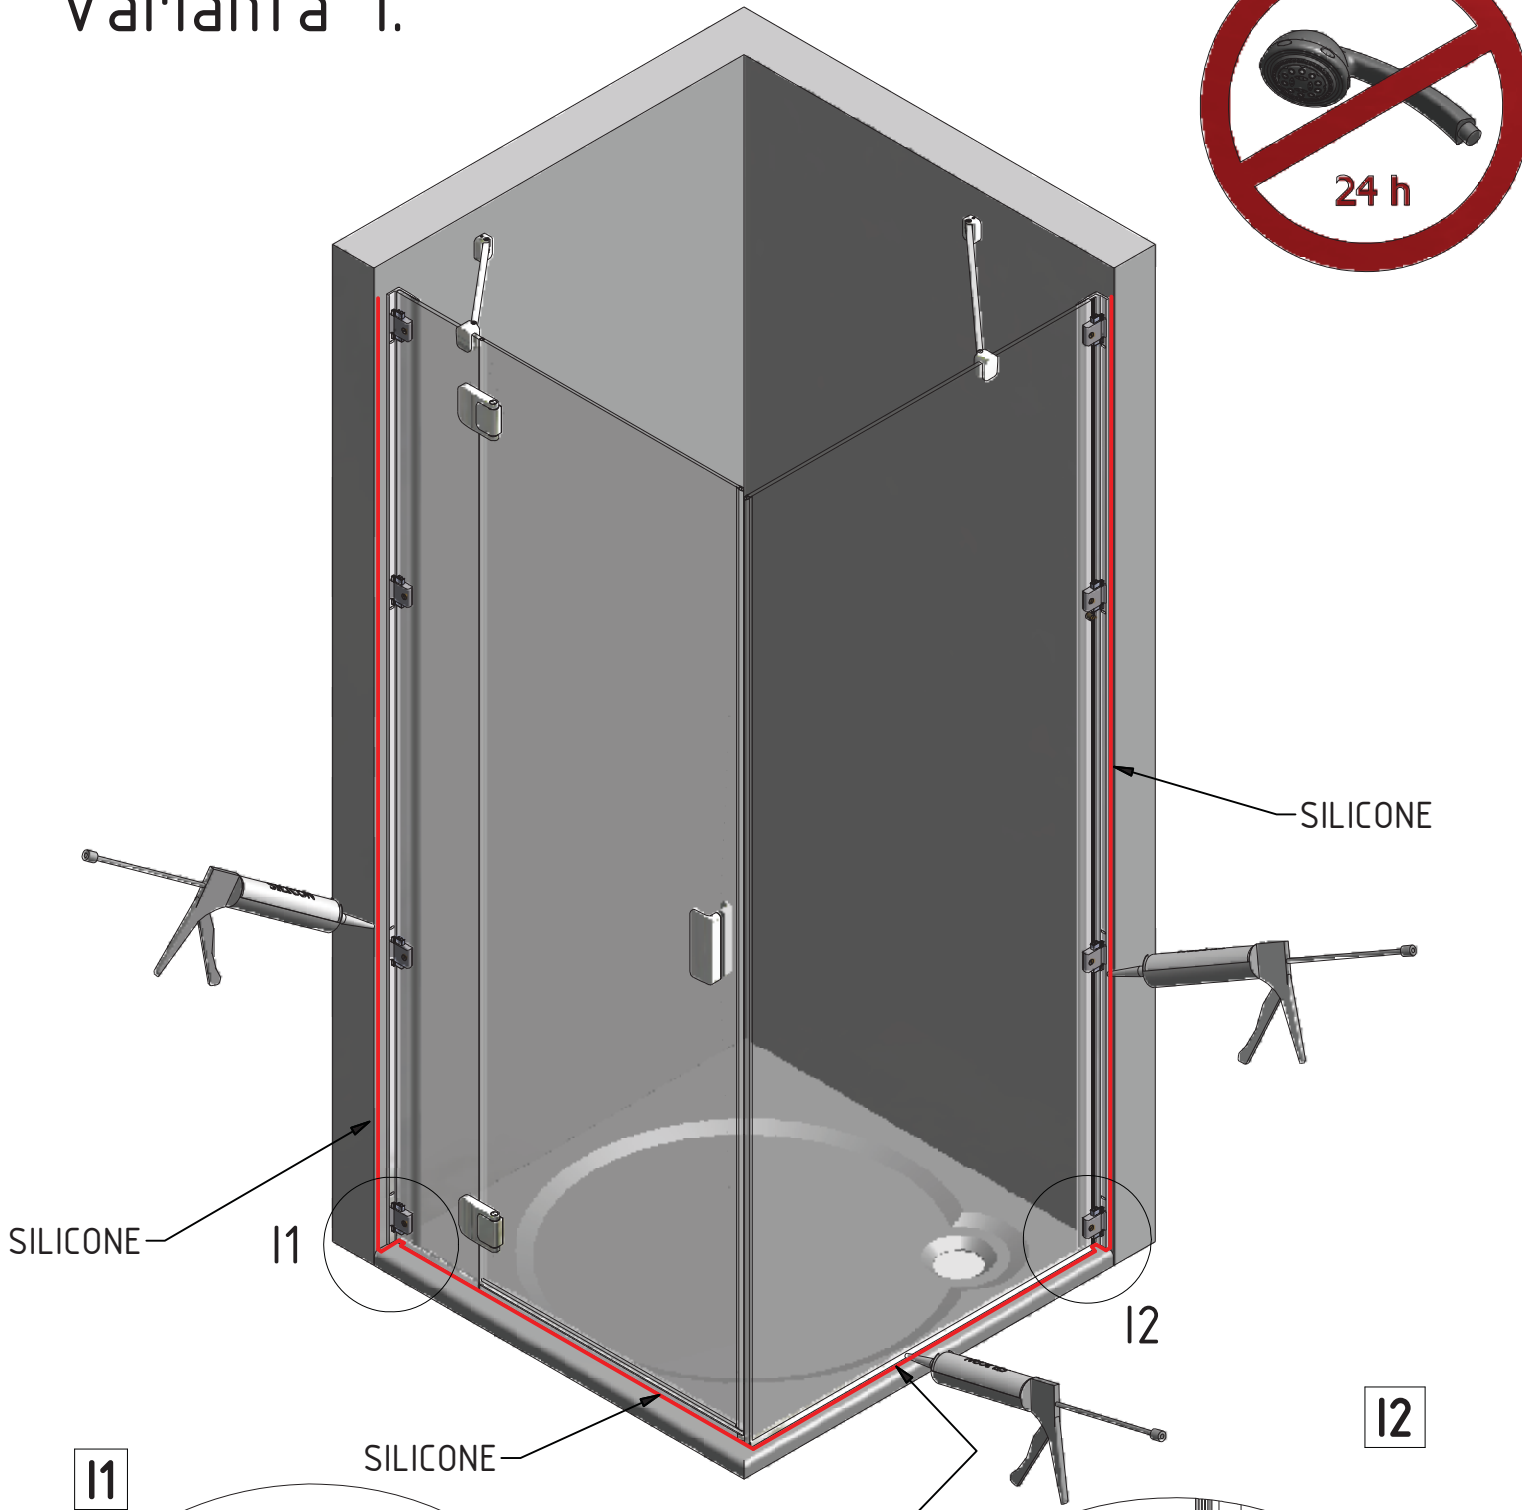


I1

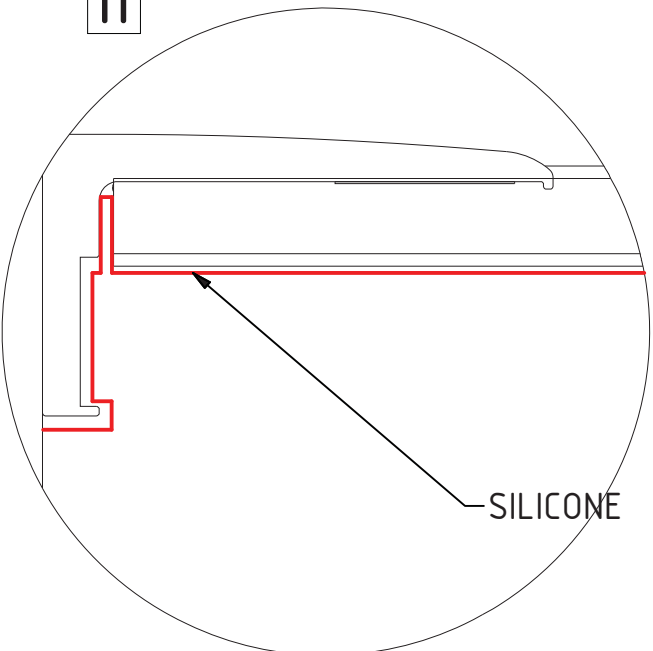


SILICONE

I2

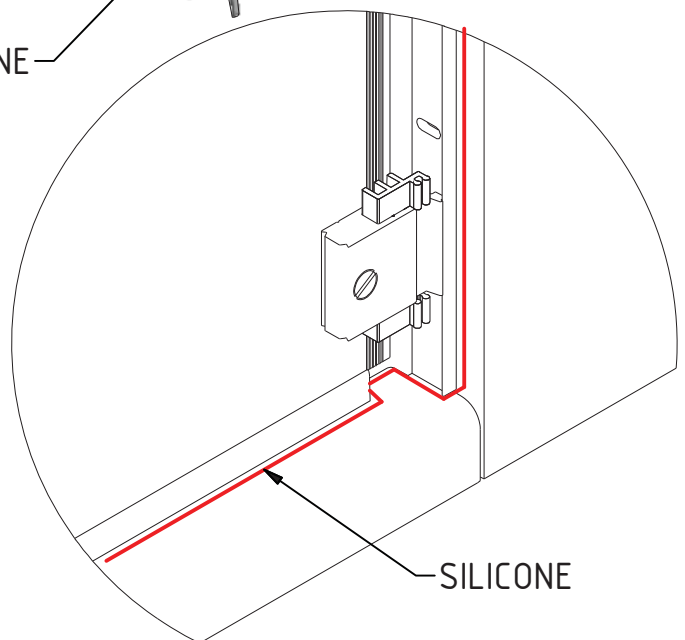



SILICONE




Variant 2.

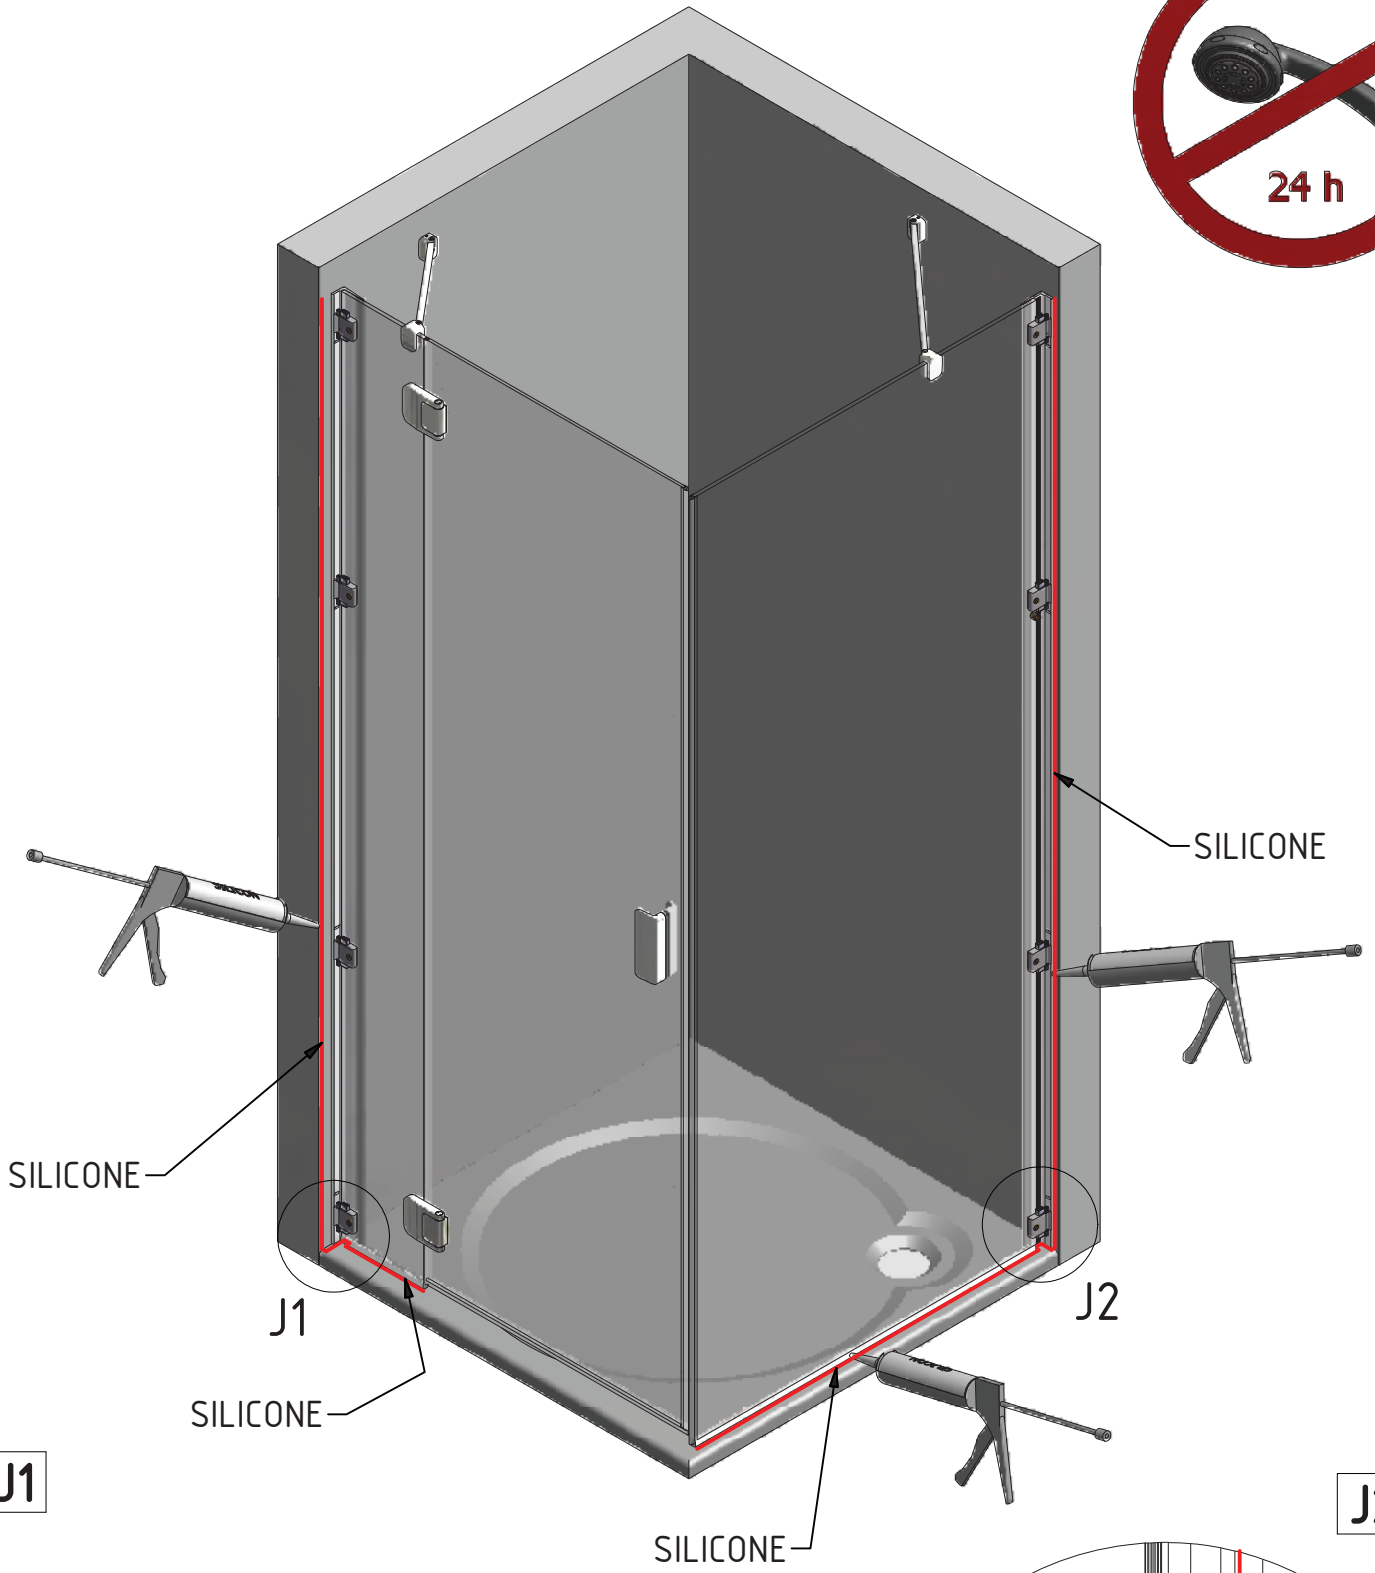



J1

J2

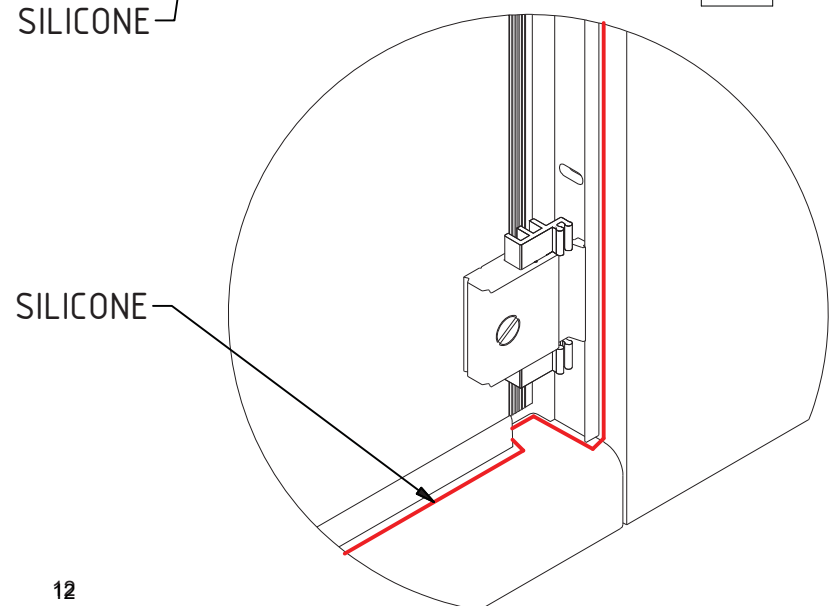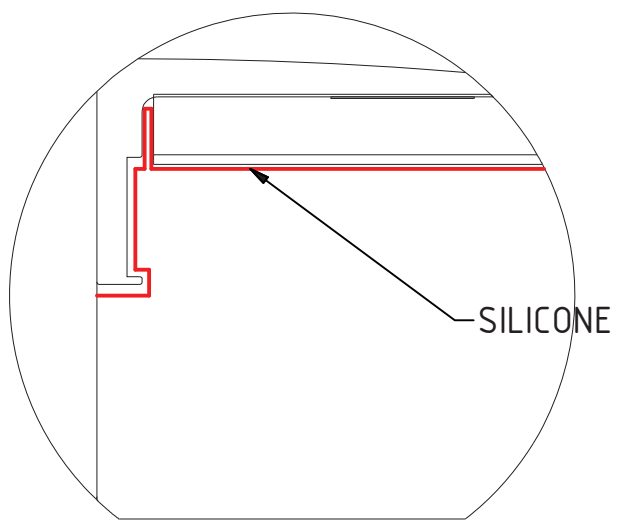

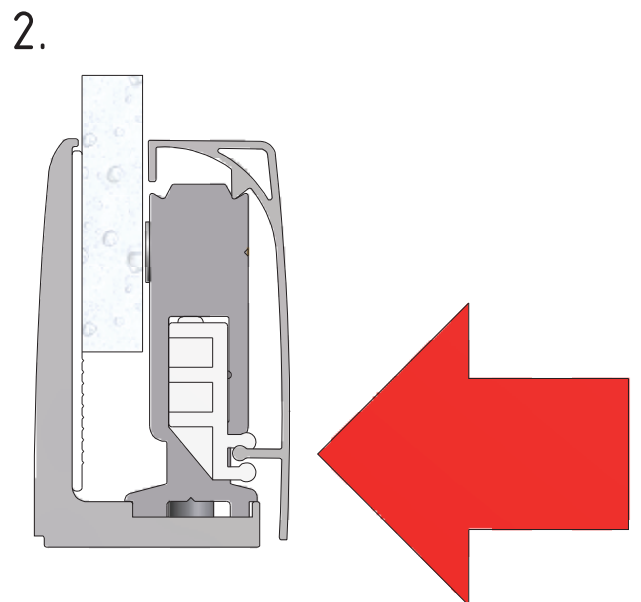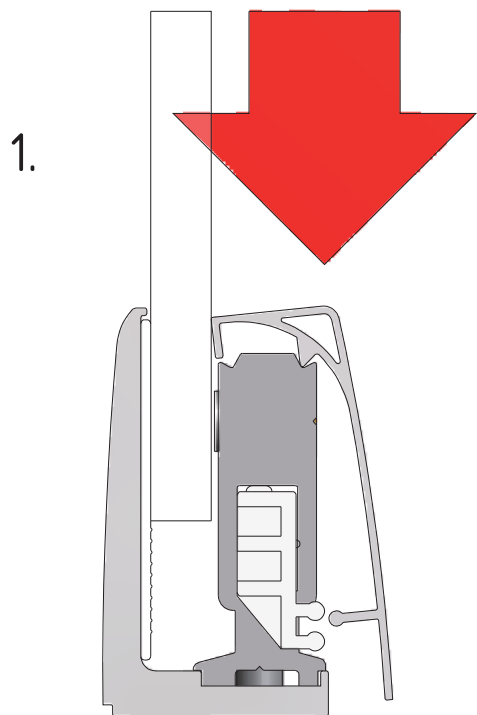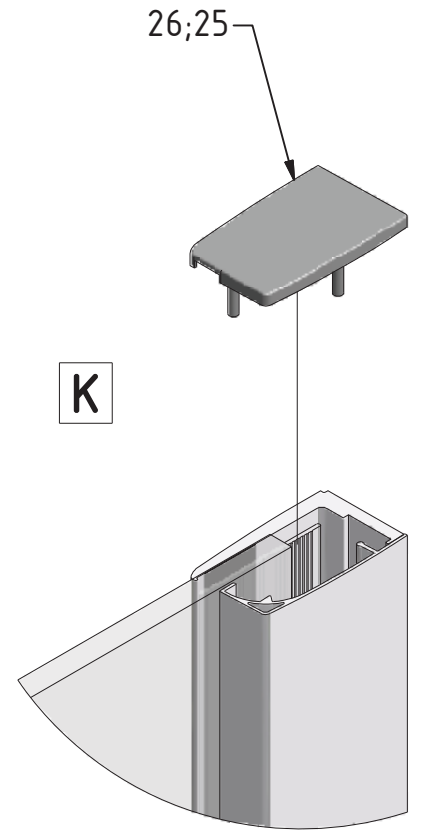

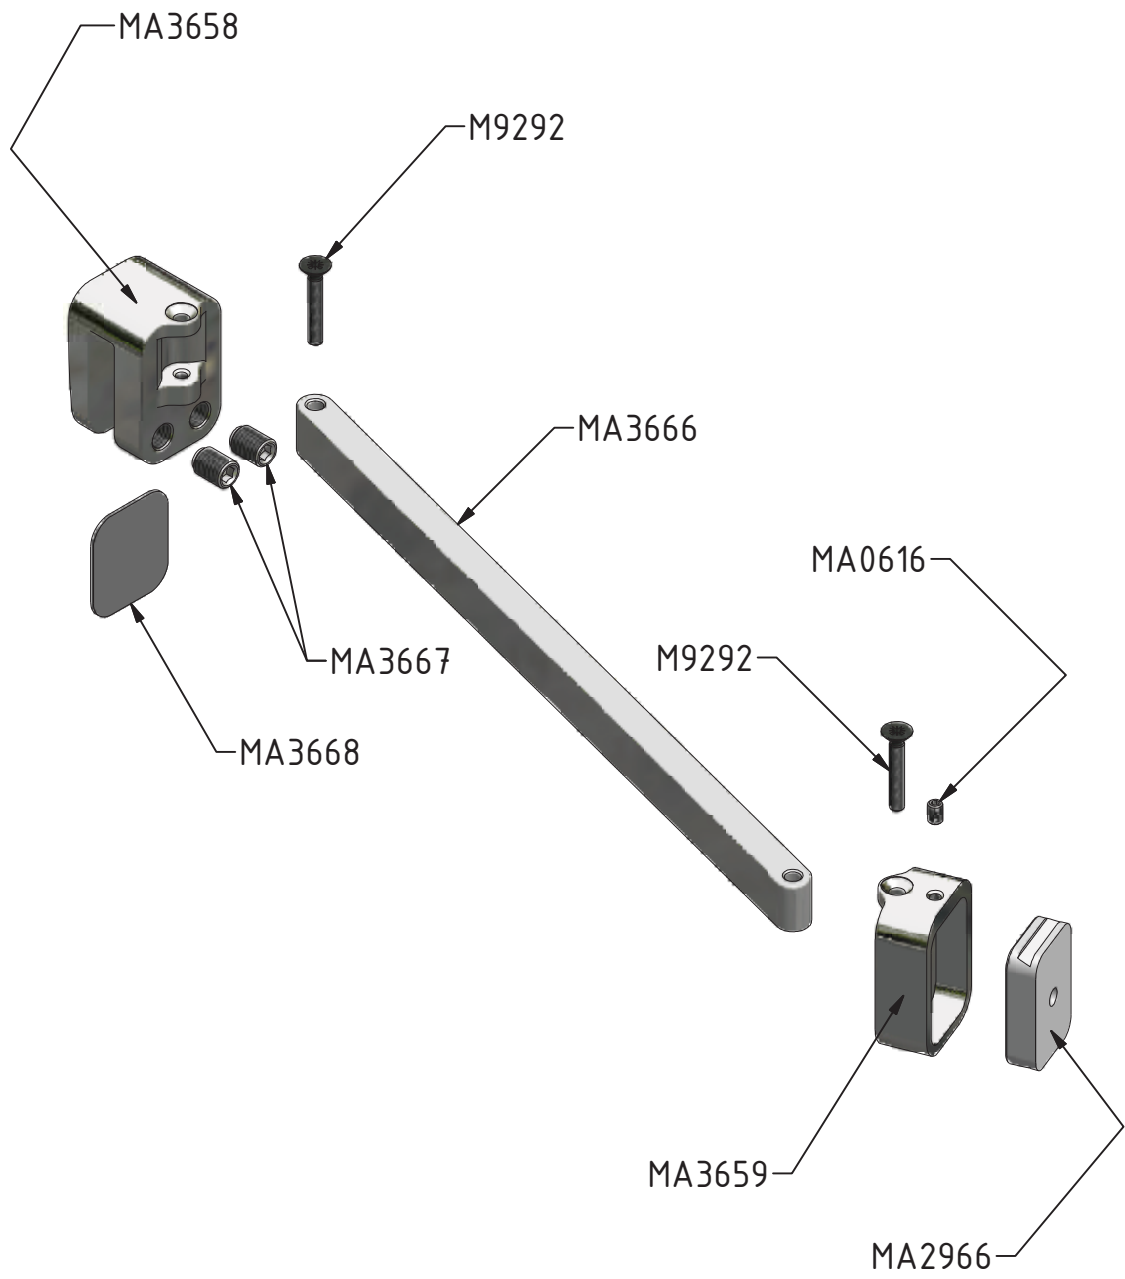

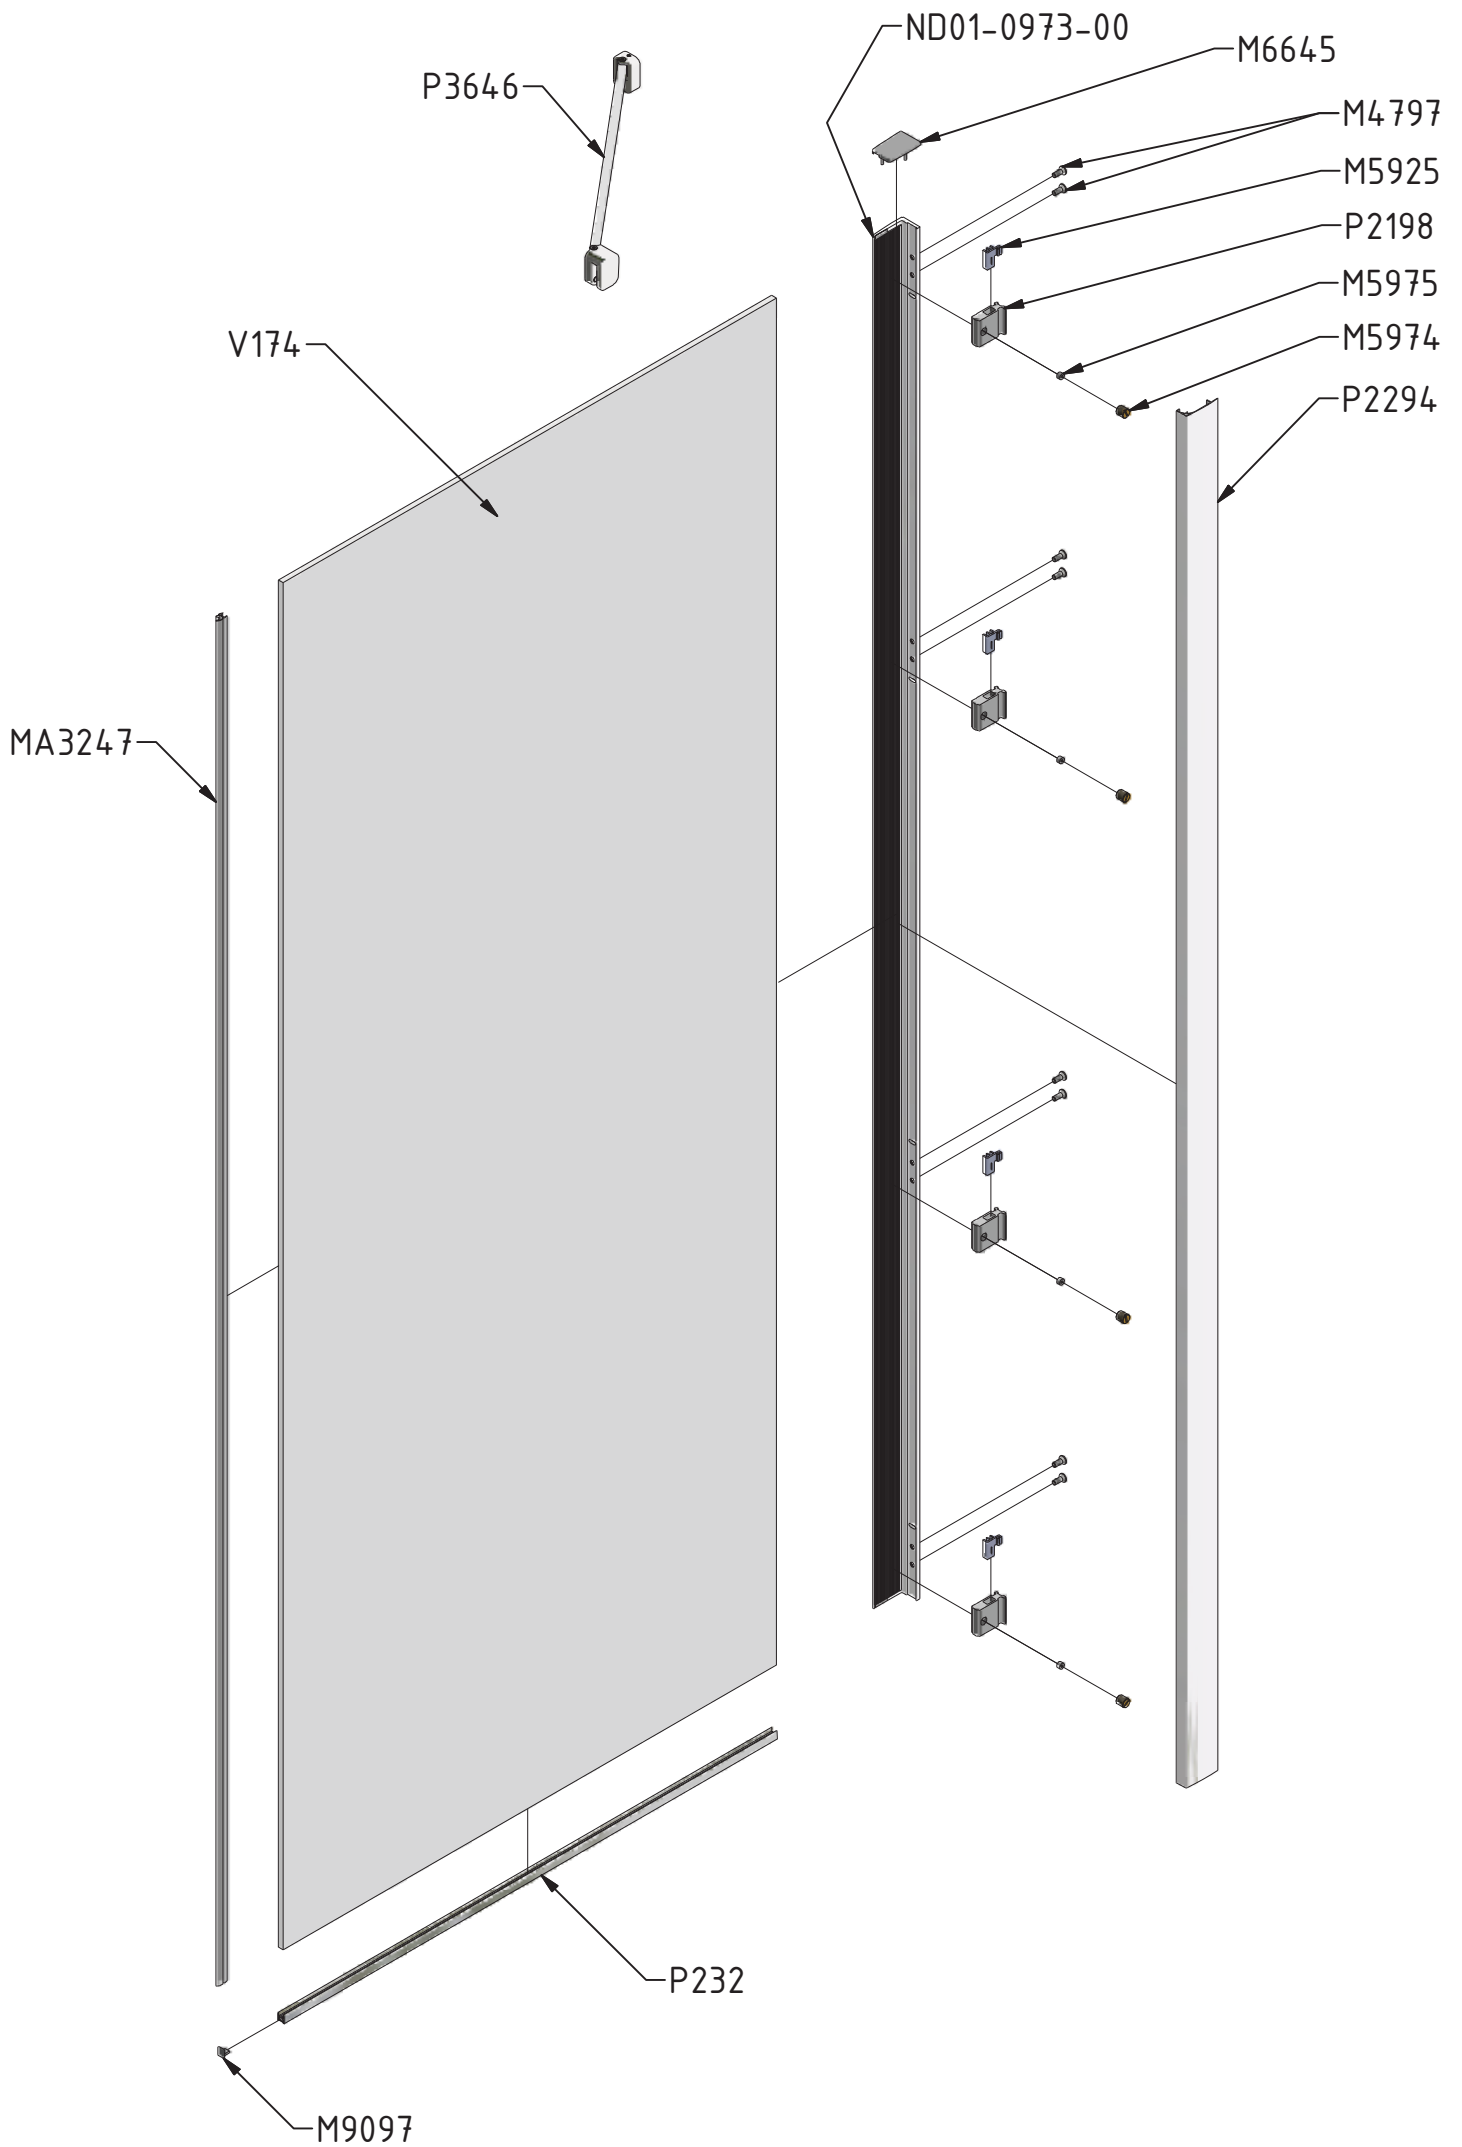

V174	800	clear glass	ND03-0654-02
	900	clear glass	ND03-0655-02
	1000	clear glass	ND03-0656-02

P232	800	brillant	P2669
	900	brillant	P2670
	1000	brillant	P2671